5. Troubleshooting

5-1 No Power

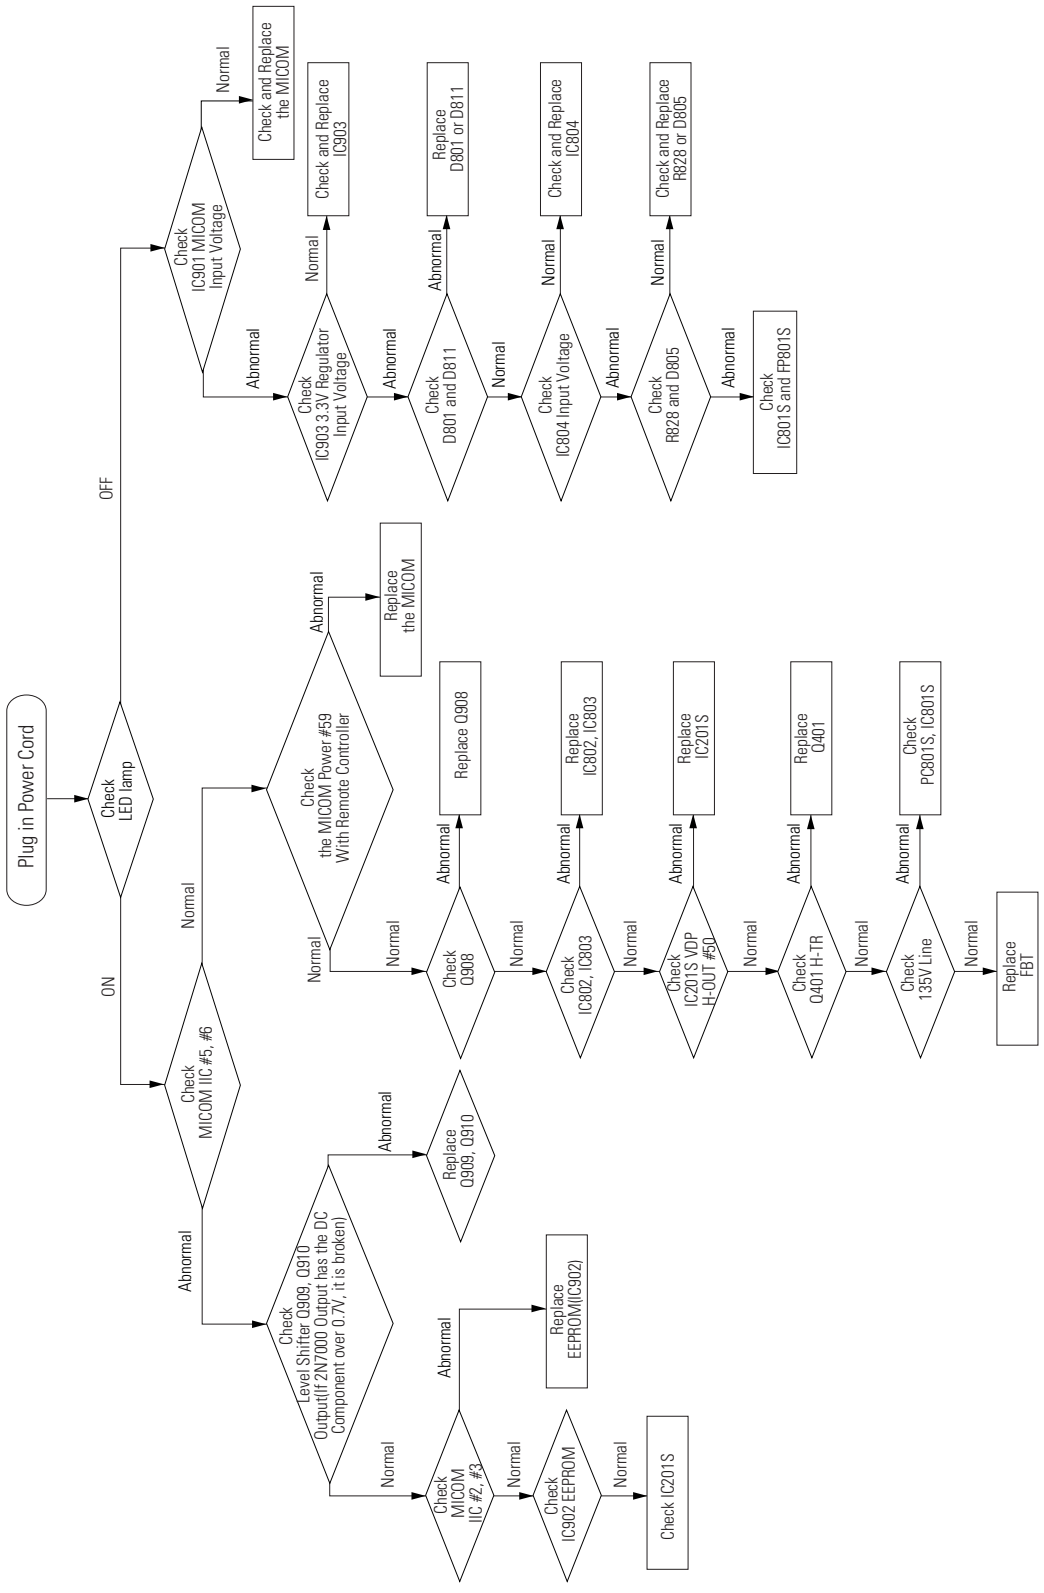

Note : When you check whether any component is normal, you must let the output pin be open in order not to be affected by the side of output.

5-2 No Picture

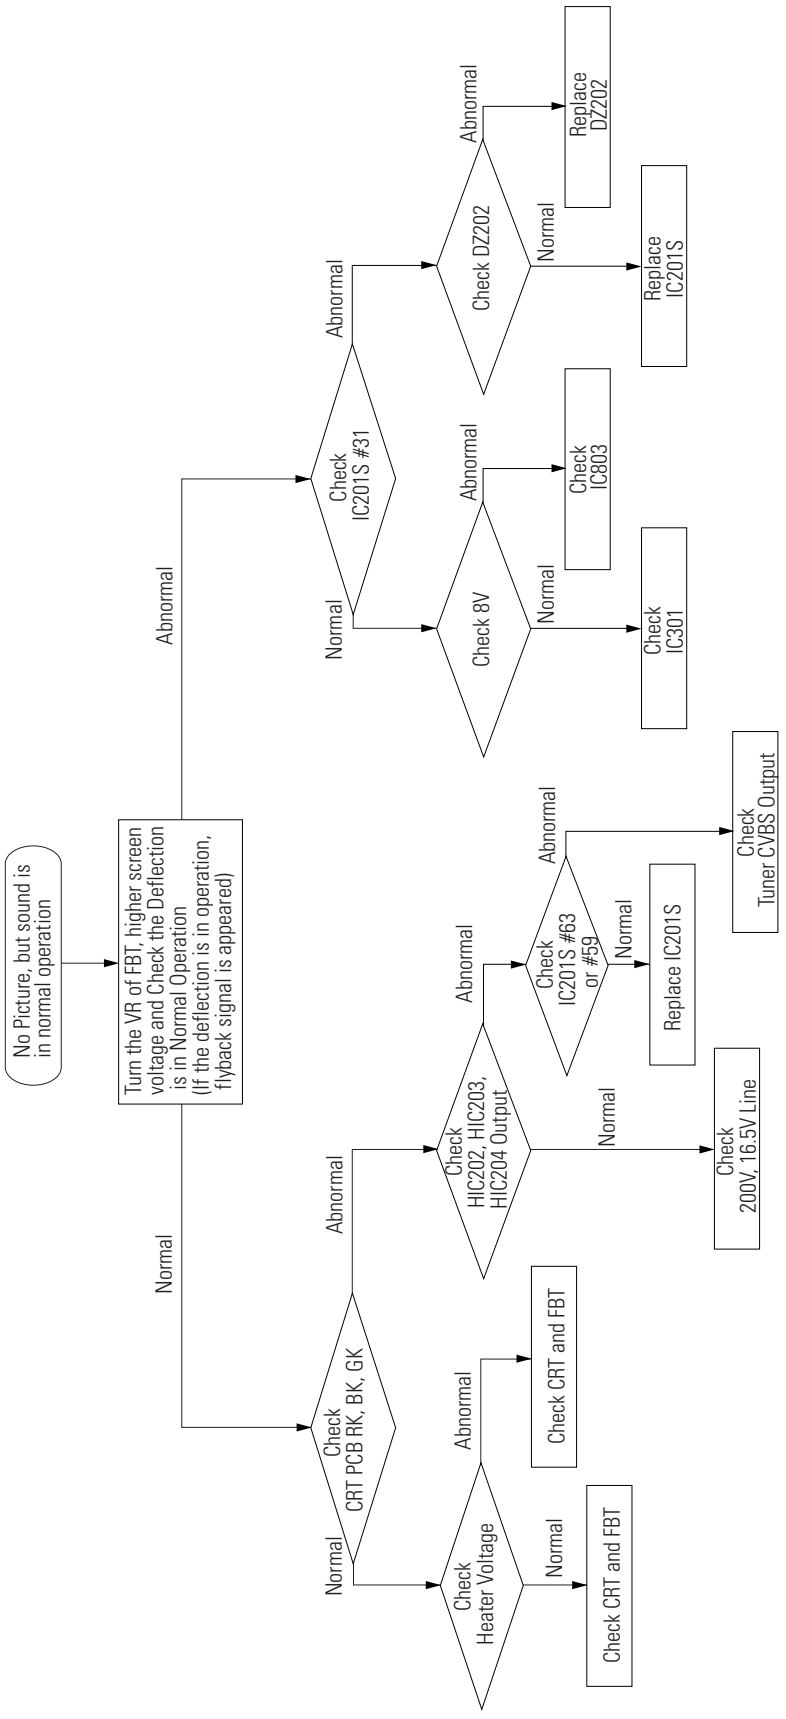

5-3 No Sound

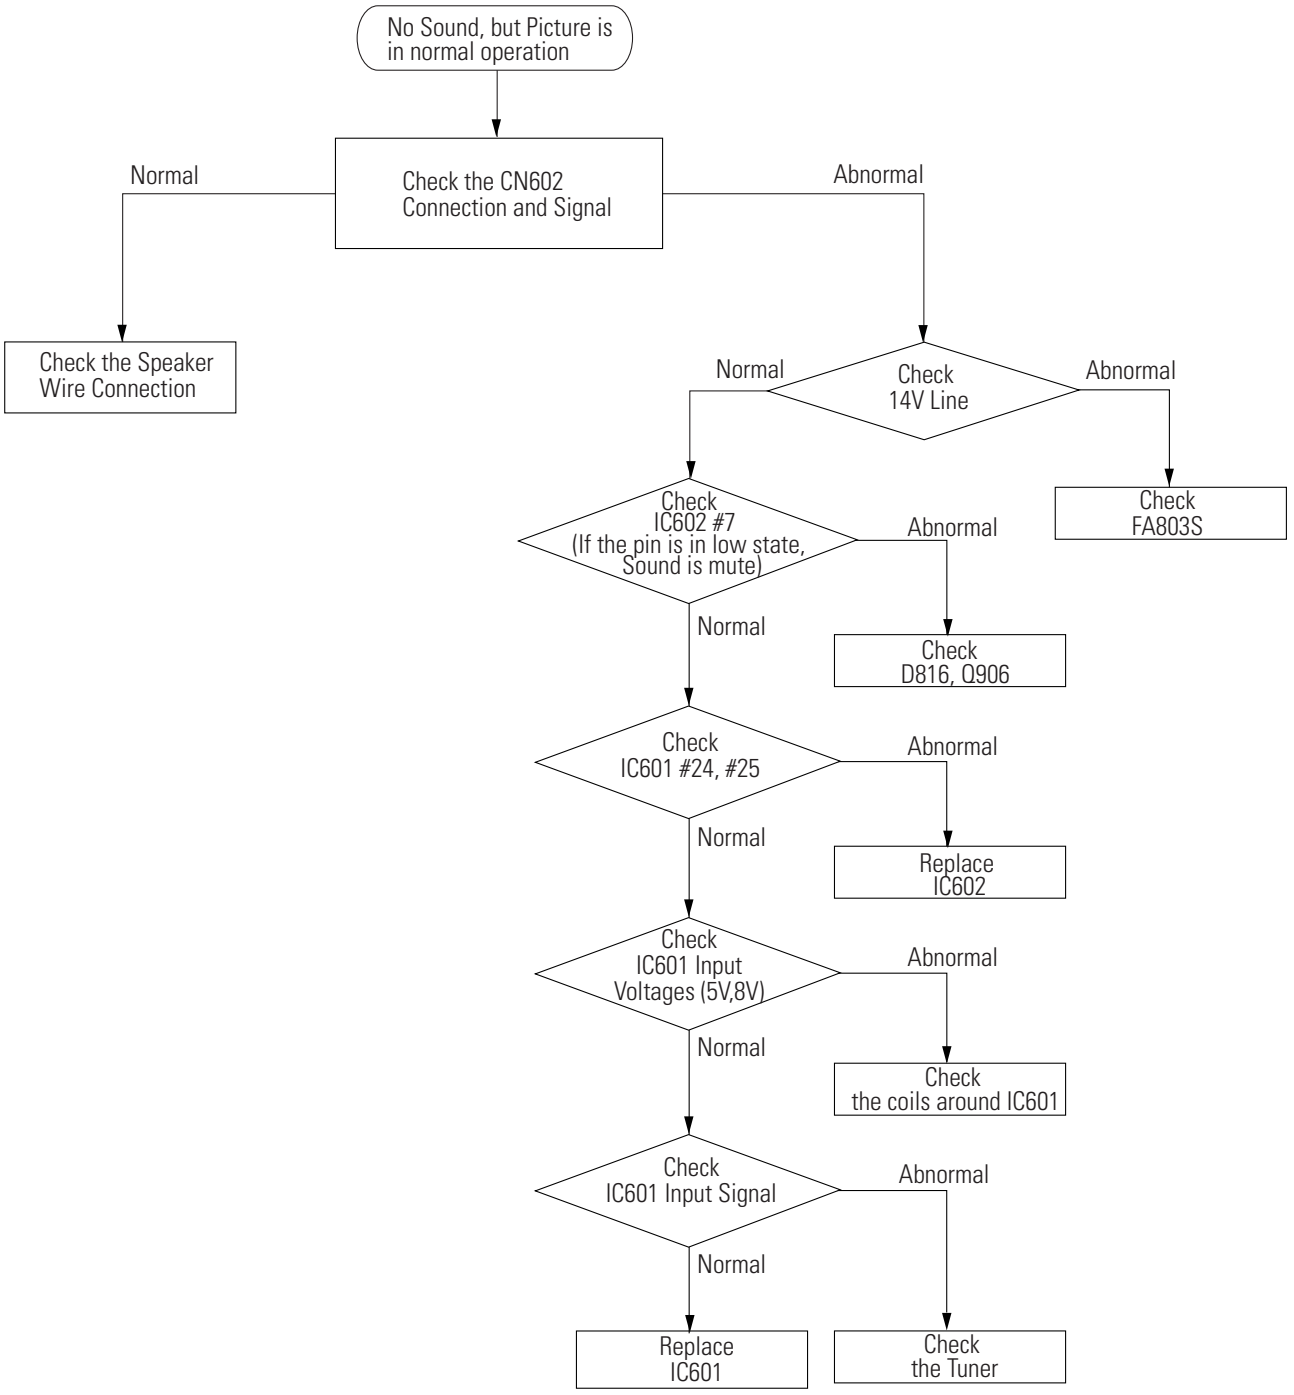
No Sound, but Picture is in normal operation
Check the CN602 Connection and Signal
Normal
Abnormal
Check the Speaker Wire Connection
Check 14V Line
Normal
Abnormal
Check FA803S
Check IC602 #7 (If the pin is in low state, Sound is mute)
Abnormal
Check D816, Q906
Normal
Check IC601 #24, #25
Abnormal
Replace IC602
Normal
Check IC601 Input Voltages (5V,8V)
Abnormal
Check the coils around IC601
Normal
Check IC601 Input Signal
Abnormal
Check the Tuner
Normal
Replace IC601

MEMO